




RHINO-RACK

Rhino 2500FMP - Two Crossbar System

Important:

Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.

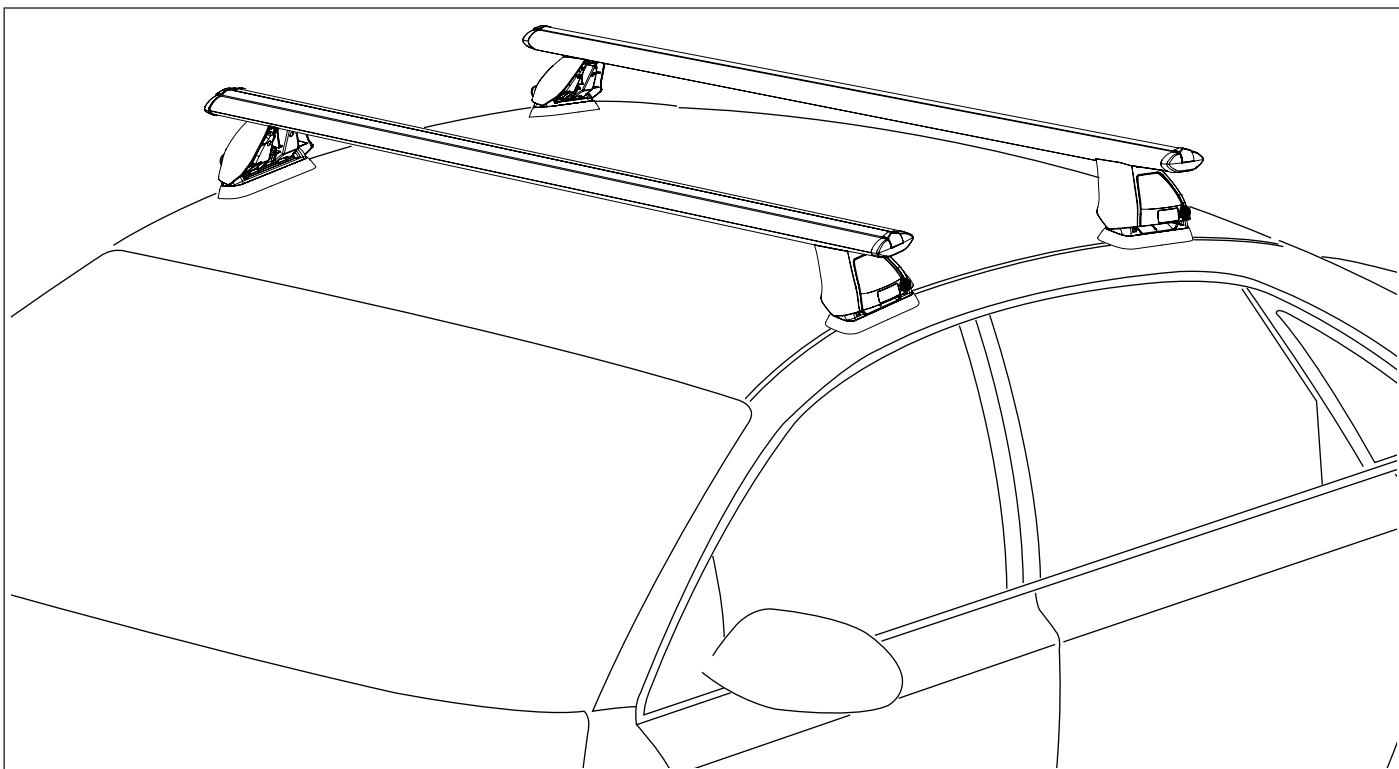

Maximum carrying capacity: 75kg (165lbs) evenly distributed over crossbars. Please refer to your vehicle manufacturers handbook and DK Specification sheet for maximum roof loading. Always use the lower of the two figures.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Use only non-stretch fastening ropes or straps.

Load Ratings

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be **halved**. For example, if the vehicles maximum roof load rating is 70kgs (subtract 5kg - weight of crossbar and legs), these racks, when fitted to this vehicle should have no more than 35kgs loaded on them

Caution:

The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. **Please remove crossbars when putting vehicle through an automatic car wash.**

Note for Dealers and Fitters:

It is your responsibility to ensure instructions are given to the end user or client.

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744
(Fax) (02) 9638 4822








Document No: R083
Prepared By: Andy Wana
Authorised By: Chris Murty

Issue No: 03
Issue Date: 08/02/2012



These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.



Rhino 2500FMP Two Crossbar System

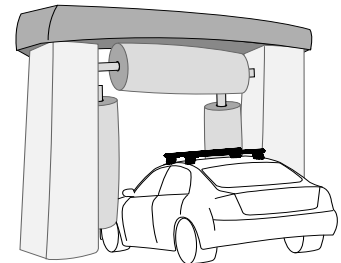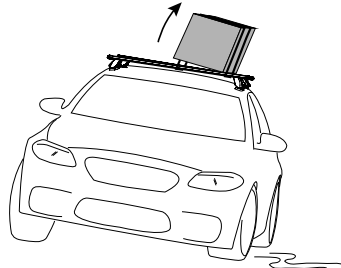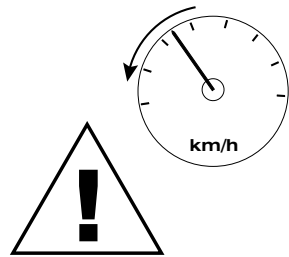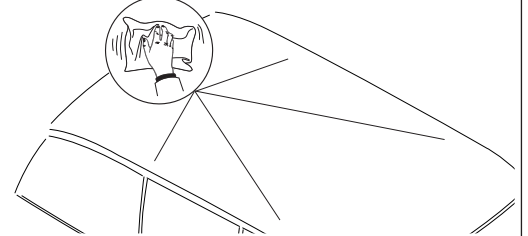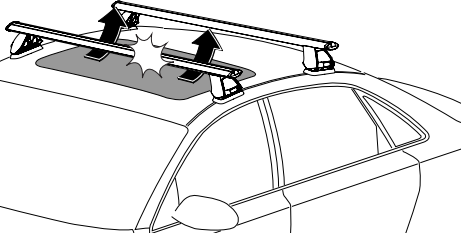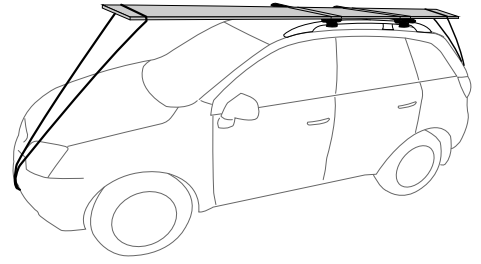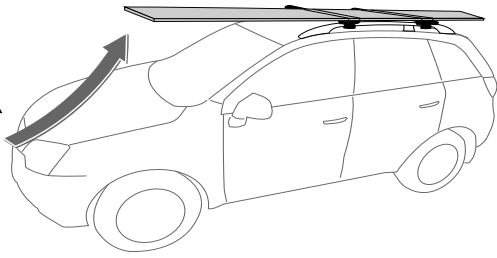


2 x Crossbars = 5kg

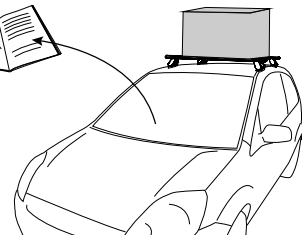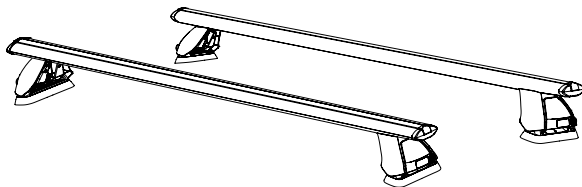


? kg

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be **halved**. Do not forget to subtract 5kg from your maximum carrying capacity due to the weight of the crossbars and legs.

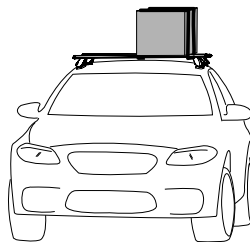


70kg load rating (Urban road) = **35 kg load rating** (Off road - 70kg / 2)

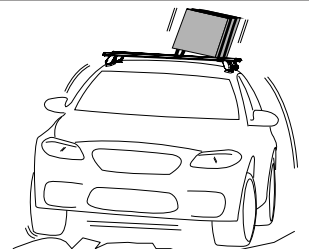


WARNING! Important Load Carrying Instructions


With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.

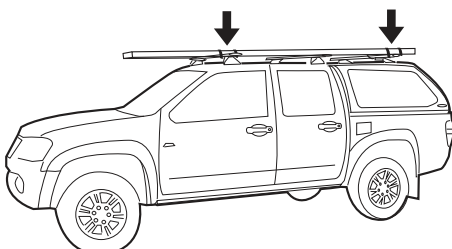

X NO

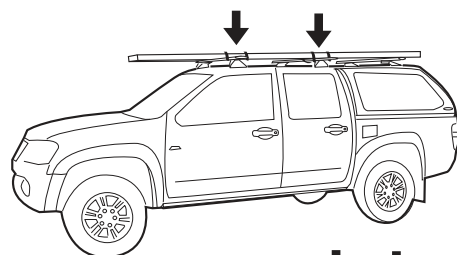

✓ YES

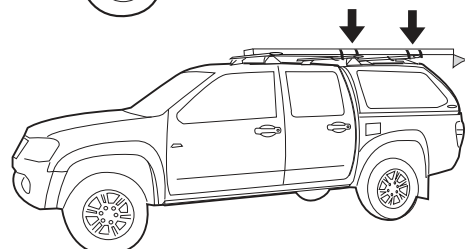


✓ YES



Rhino 2500FMP Two Crossbar System

Parts List

Item	Component Name	Qty	Part No.
1	Attachment stud (<i>kit specific</i>)	4	-
2	Fastening knob	4	M554
3	Rear mount bracket	4	C564
4	10mm hex spanner	1	CA1026
5	Front mount bracket	4	C565
6	M6 spring washer	4	W004
7	M6 x 12.5mm flat washer	4	W003
8	M6 x 20mm security screw	4	B062
9	M6 nyloc nut	4	N013
10	M6 hex bolt (<i>kit specific</i>)	4	-
11	Foot plate	4	M311-D13
12	FMP pad (<i>kit specific</i>)	4	-
13	Fitting instruction	1	R083

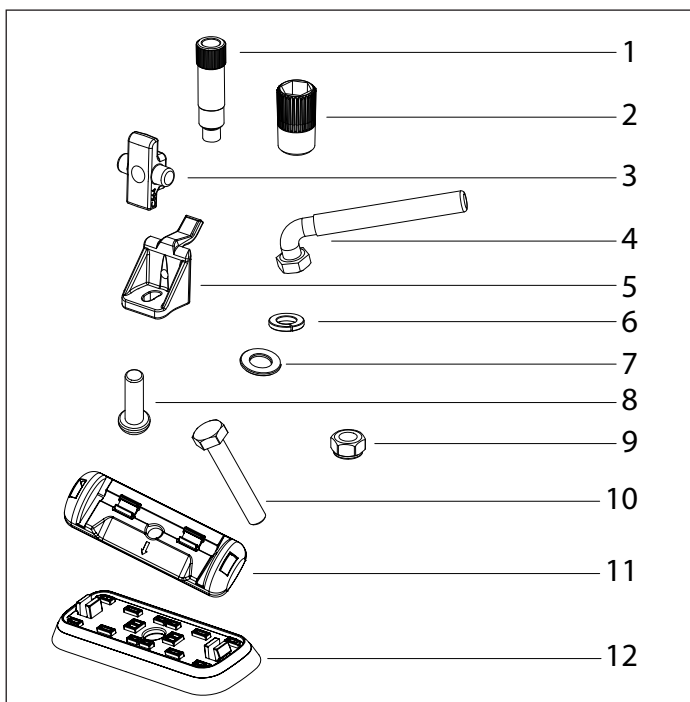

Tools required:


Security Allen key, provided.

Hex spanner, provided.

Tape measure


Torque wrench

Scissors

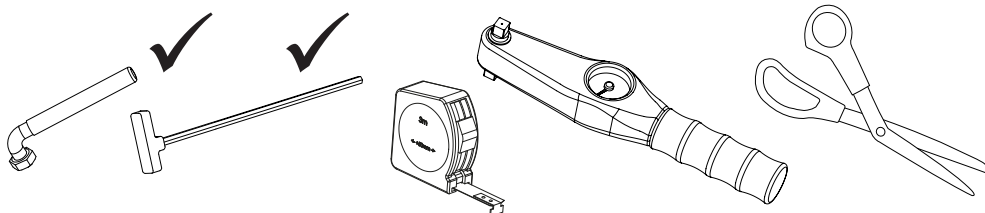

Refer to DK specification sheet for correct roof rack placement on your vehicle.


Discard parts shown below.

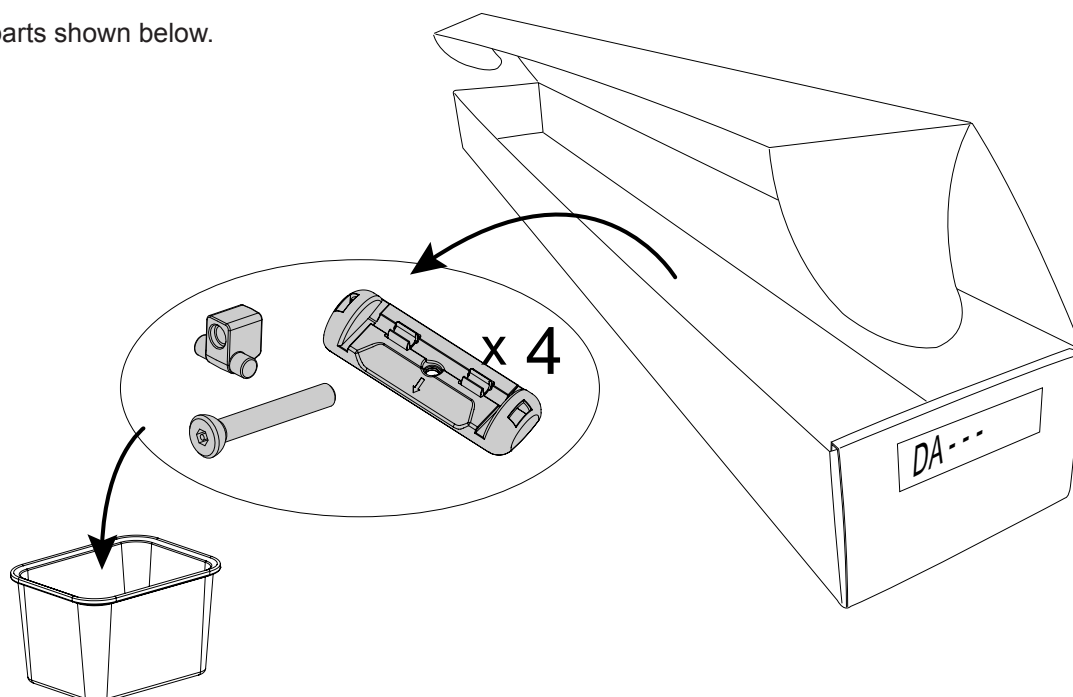




Rhino 2500FMP Two Crossbar System


1 Remove M8 bolt and M8 nut.

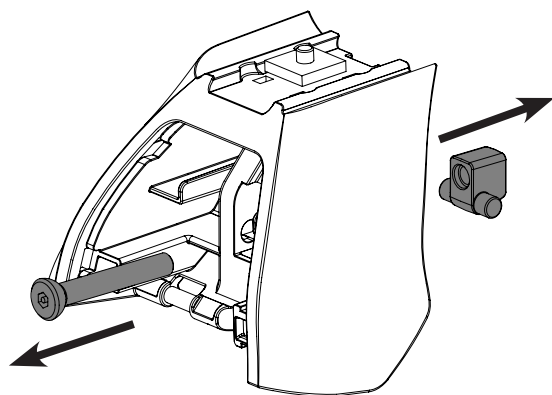


2 Attach hardware.

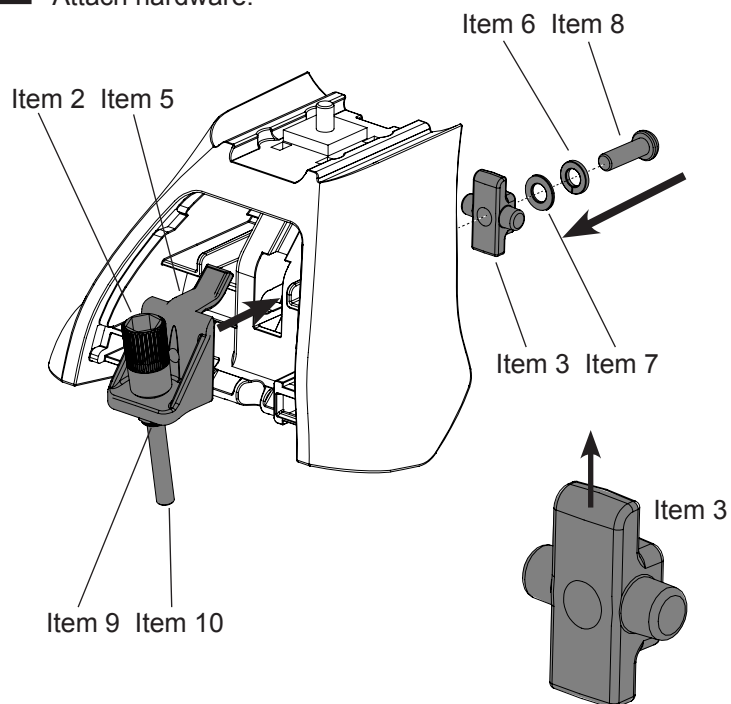


3 Attach pad to foot plate.

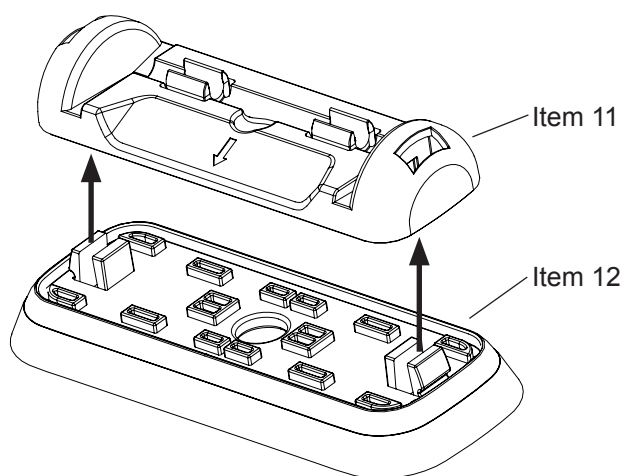

4 Attach leg to foot plate.

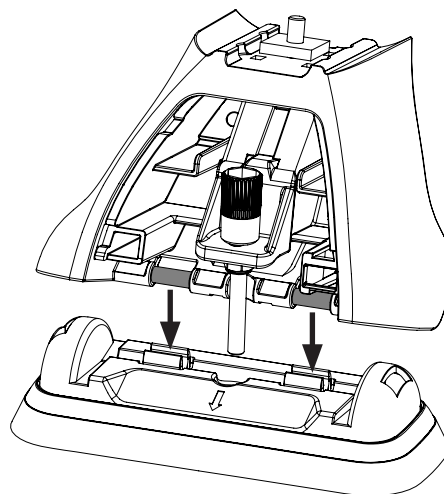


5 Insert crossbar rubber. Refer DA kit for parts.

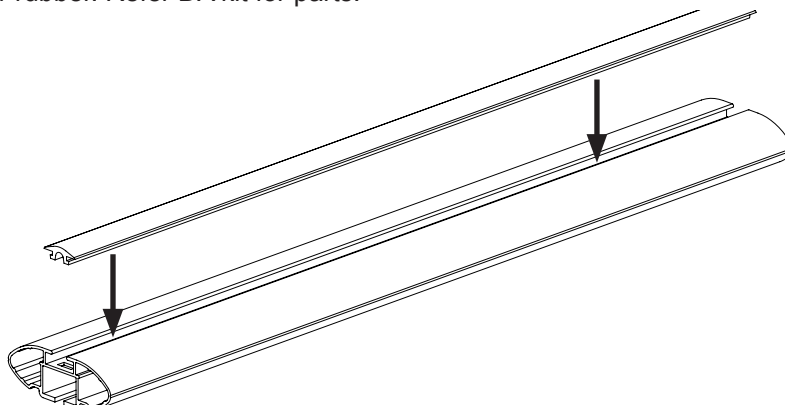




Rhino 2500FMP Two Crossbar System


- 6** Cut for Front & Rear. Refer DK sheet and DA kit for parts.

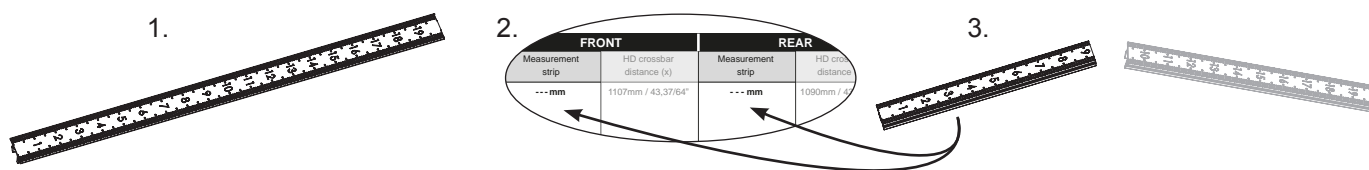


- 7** Slide into each end of crossbar until it stops.

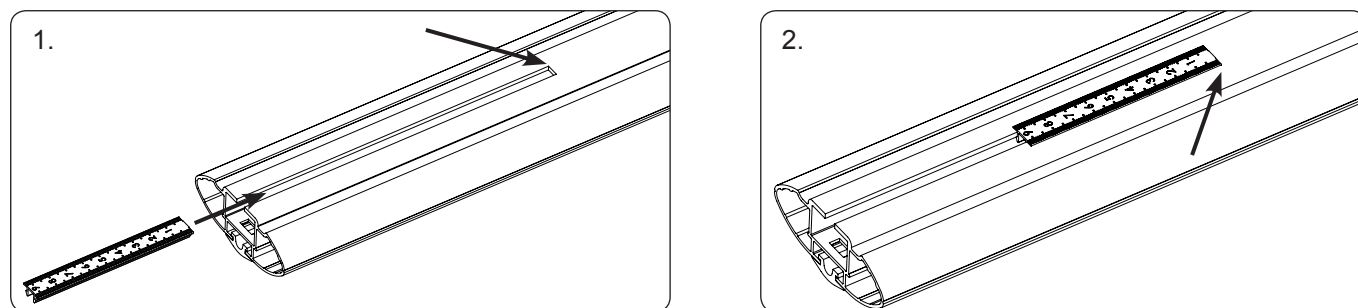

- 8** Tighten M6 screw with Allen key provided to 4 Nm (35 lbf.in).

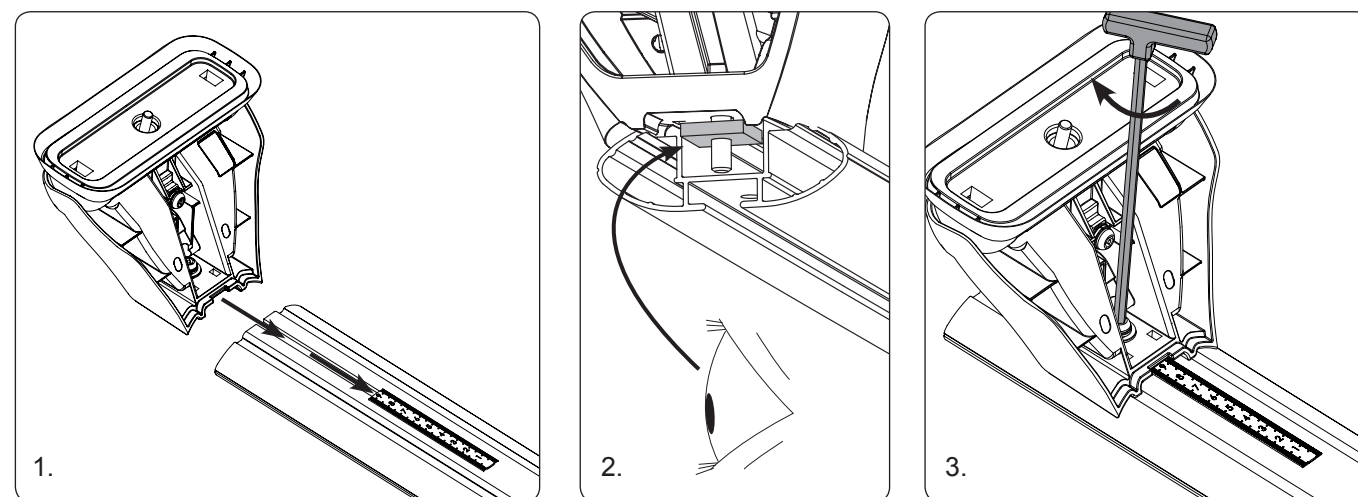


- 9** Fit remaining measurement strip.

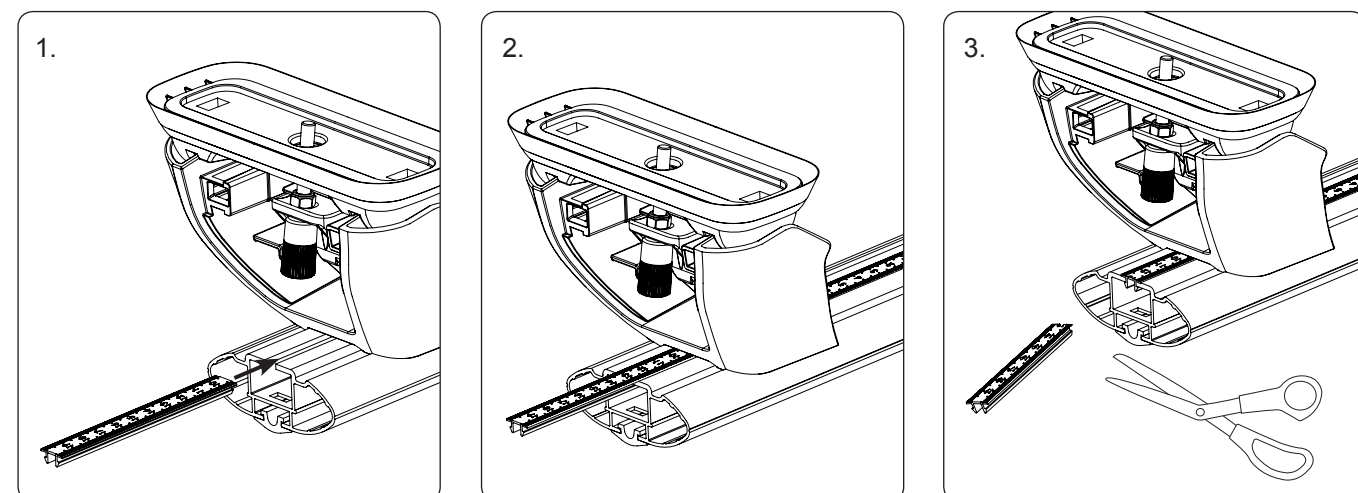




Rhino 2500FMP Two Crossbar System


10 Attach location decals.

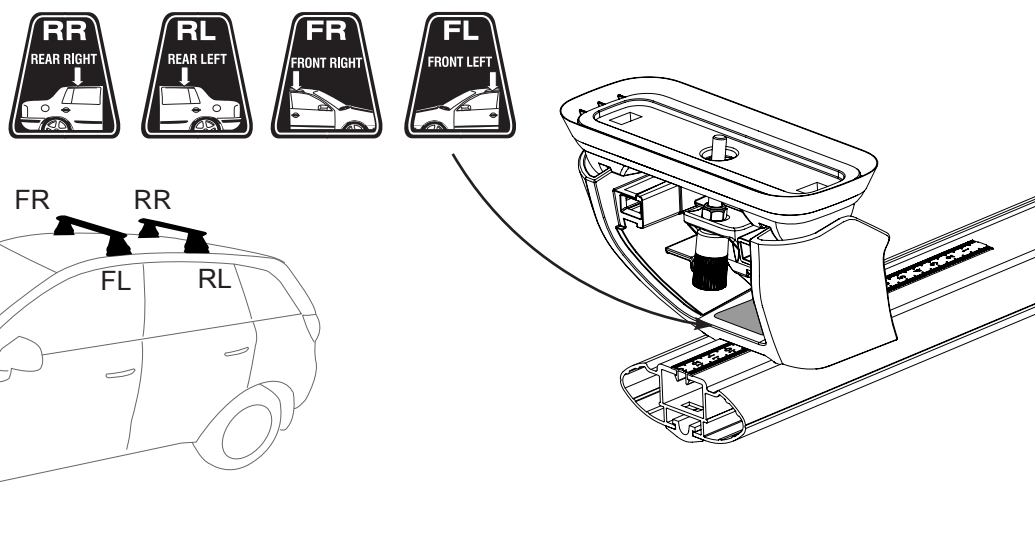

11 Attach 4 studs. Finger tighten only.

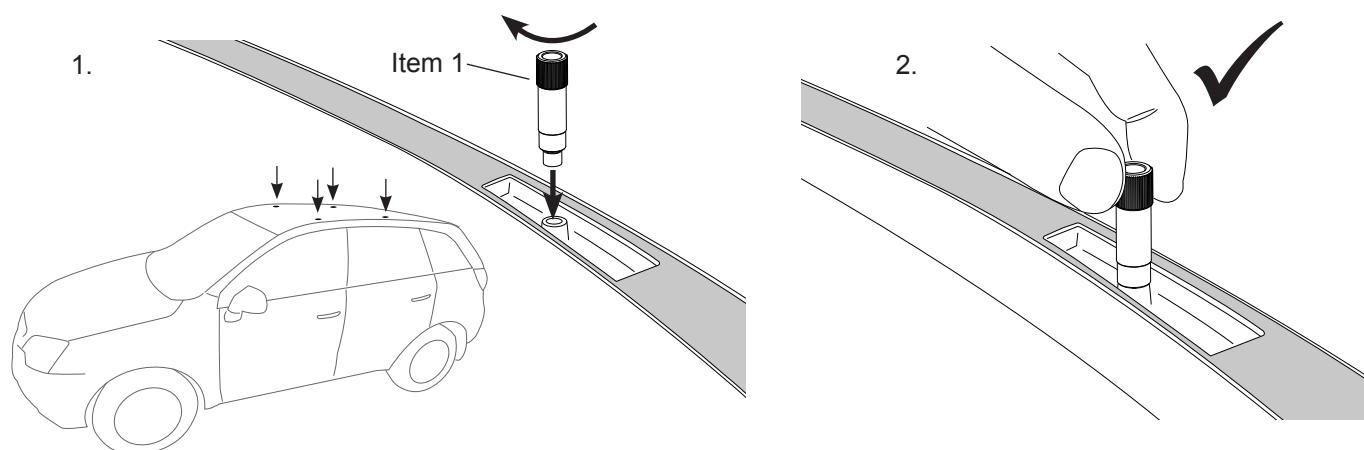


12 Attach crossbars.

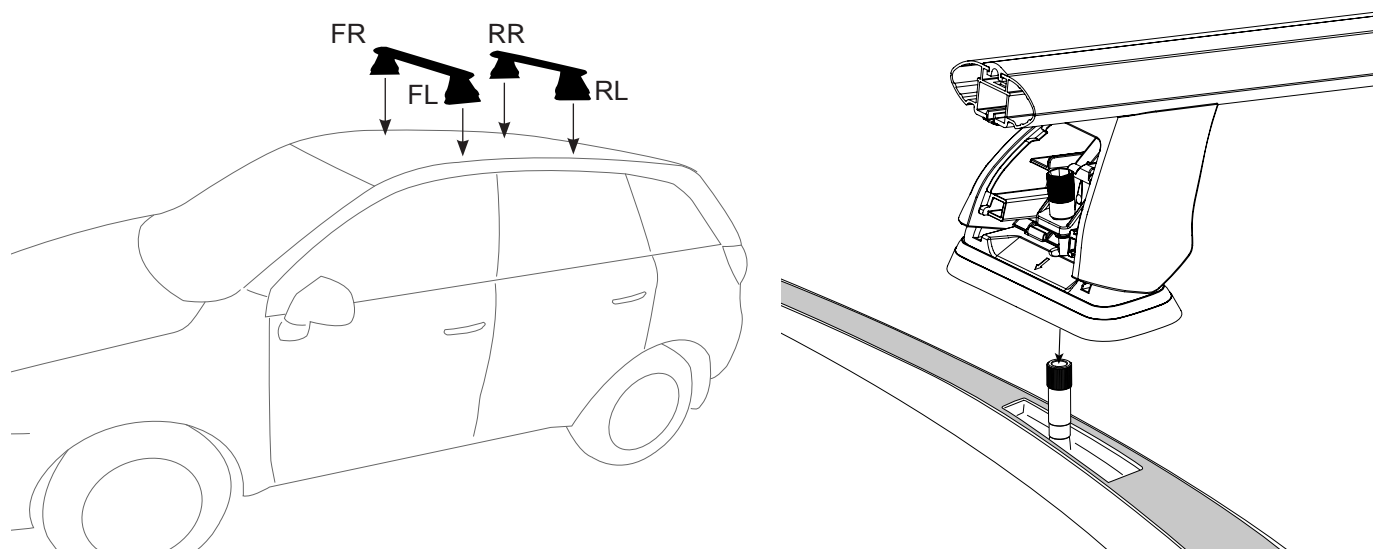



Rhino 2500FMP Two Crossbar System




13

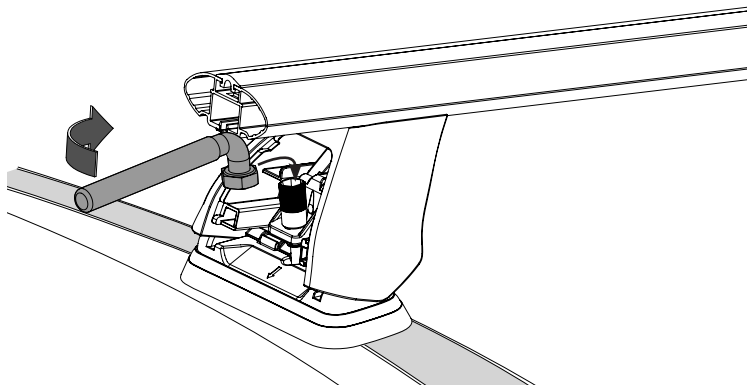

Locate M6 screw into stud. Tighten plastic bolt housing alternately both sides.
Tighten 3-4 Nm, 26-35 lbf.in.




14

Tighten M6 Nyloc nut against underside of metal bracket. 1-2 Nm, 9-18 lbf.in. Do not over tighten.

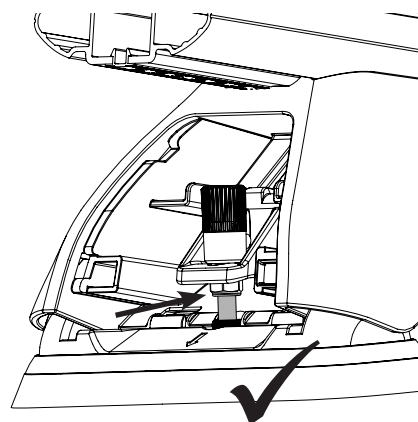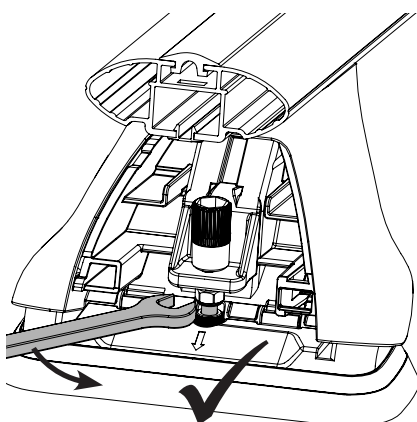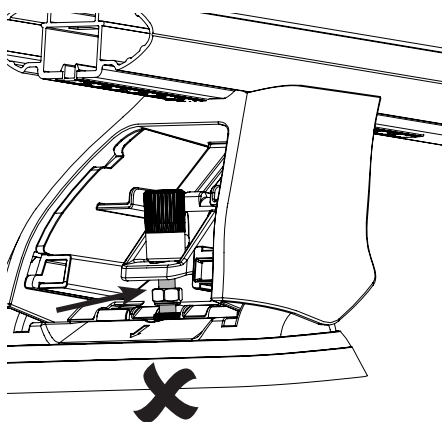


15

Fit end caps.

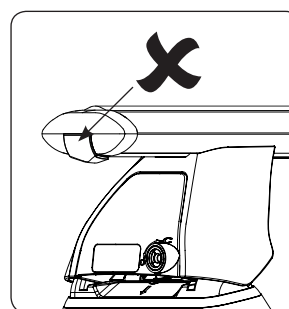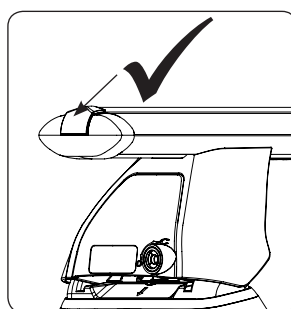
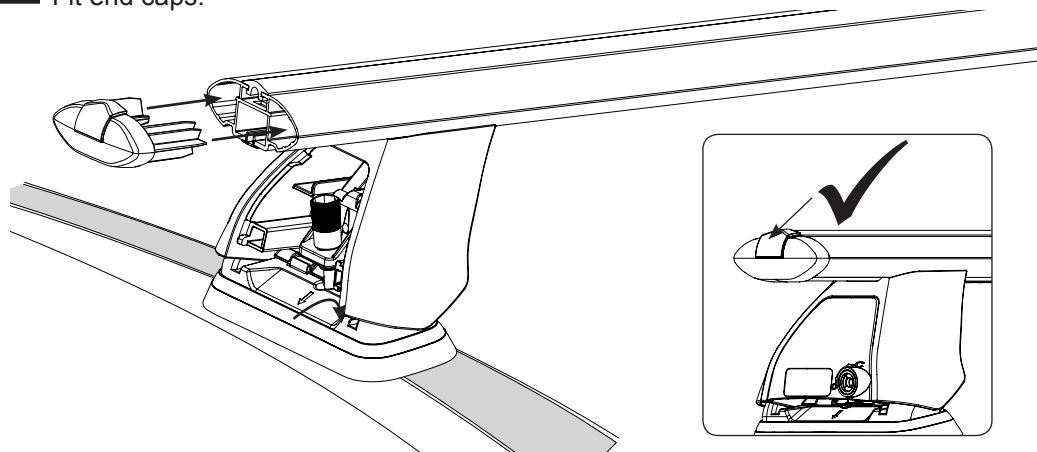


16


Attach front cover.

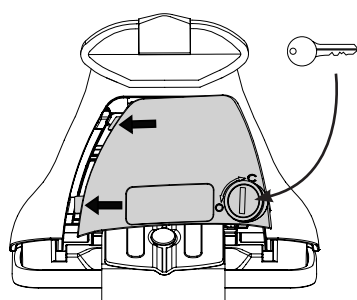

Front cover
key

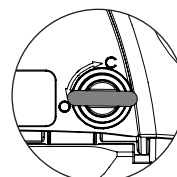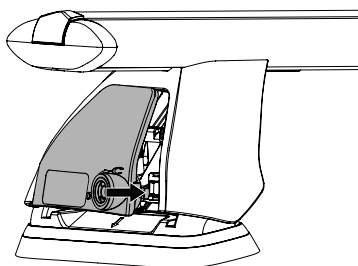

Open

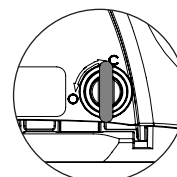

Closed